

YAMAHA KX-1200U



Natural Sound Stereo Cassette Deck

Closed Loop-Dual Capstan Mechanism

3-Head Configuration with Amorphous Rec/Play Heads

High-Quality, Low-Distortion Amplifiers

ORBiT (Optimum Recording Bias Tuning) System

Dolby HX Pro Dynamic Bias Servo

Double dbx, Double Dolby B/C Noise Reduction

Random Program Play, Music Search and Intro Scan

Master Fader Control/Auto Rec Mute

28-Key Wireless Remote Control

Thank you for purchasing the YAMAHA KX-1200U stereo cassette deck.

TABLE OF CONTENTS

Safety Instructions	1
Front Panel Parts and Functions	3
Remote Control Transmitter	7
Connections	12
Cassette Tapes	13
Operation	14
Maintenance	18
Troubleshooting	19
Specifications	21



OWNER'S MANUAL

IMPORTANT

Please record the serial number of your unit in the space below.

Model: **KX-1200U**

Serial No:

The serial number is located on the rear of the unit.


Retain this Owner's Manual in a safe place for future reference.

WARNING

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

KX-1200U

FRONT PANEL PARTS AND FUNCTIONS

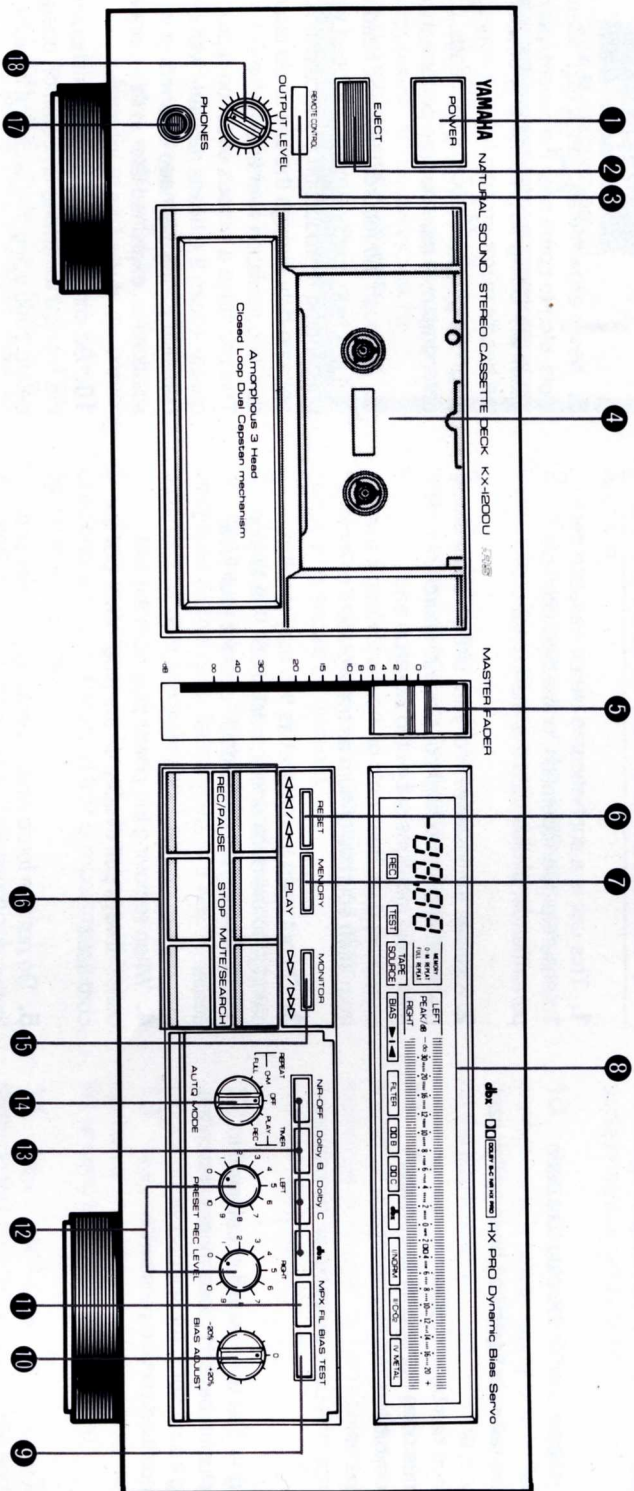

1 POWER switch
Press this switch to turn the power on. Press again to turn the power off.

2 EJECT button
To load a cassette tape, press the EJECT button and the cassette compartment will open. Depress the cassette compartment to close it.

3 REMOTE CONTROL sensor
Receives the signal from the remote control transmitter.

4 Cassette compartment

5 MASTER FADER control
Used to fade in or fade out during recording. Normally it should be set to the "0" position.
* The MASTER FADER control will function only during the recording.

6 RESET button
Press the RESET button to reset the counter reading to "0,00". It can also be used to cancel the memorized counter reading.

7 MEMORY button

Press the MEMORY button when the counter is at the desired counter reading for O-M repeat playback. Press the button again to release the memory function.
When the memory position is set, the tape will automatically stop at that position during fast-rewind or forward mode.

